

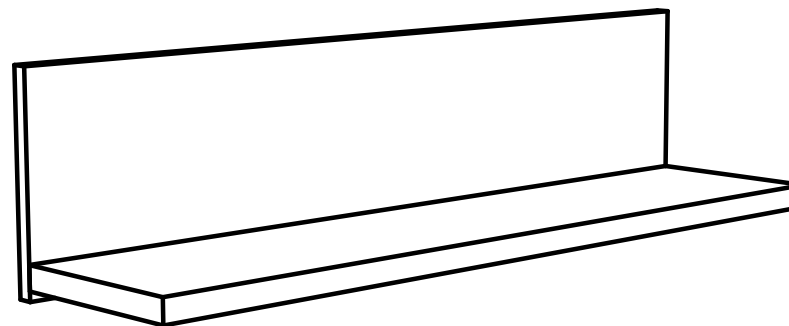


# TAHOE TA16


- PL** Instrukcja montażu
- GB** Assembly instructions
- ES** Instrucciones de instalación
- FR** Instructions de montage
- CZ** Montážní návod
- D** Montageanleitung
- HU** Összeszerelési útmutató
- SK** Montážny návod
- RU** Инструкции по монтажу
- IT** Istruzioni di montaggio
- RO** Instructiuni de asamblare
- TR** Montaj talimati
- NL** Handleiding voor de montage
- UA** Інструкція монтажу

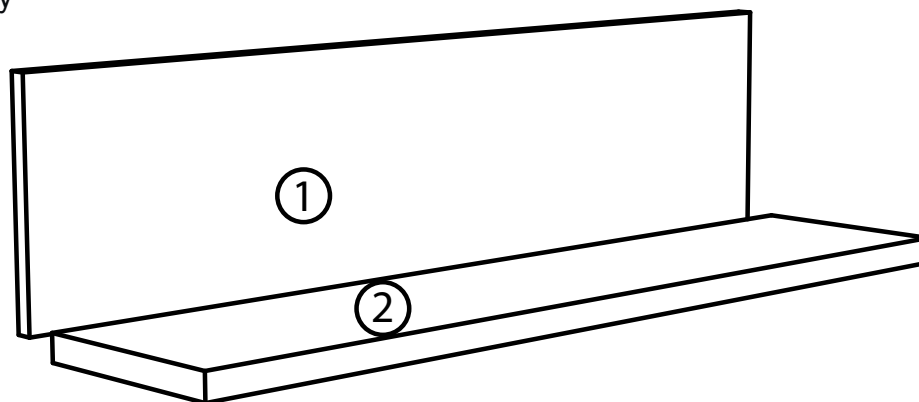

→ ↑ ↗  
900x220x220

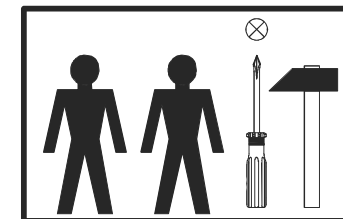


1	900x220
2	900x204

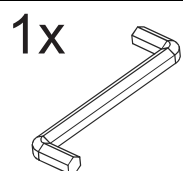

1x


Z1

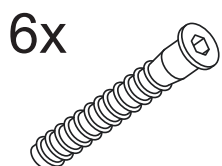

6x


6,4x50

K3

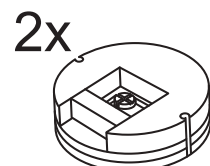

2x


Z4

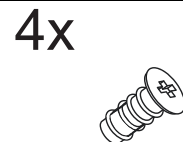

4x


5x9

A11

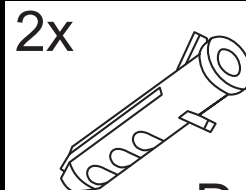

2x

D1

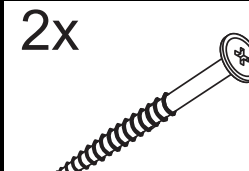

2x


6x60

D2



2x

A12

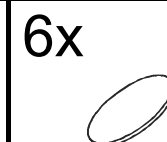

6x

Z2

