



7


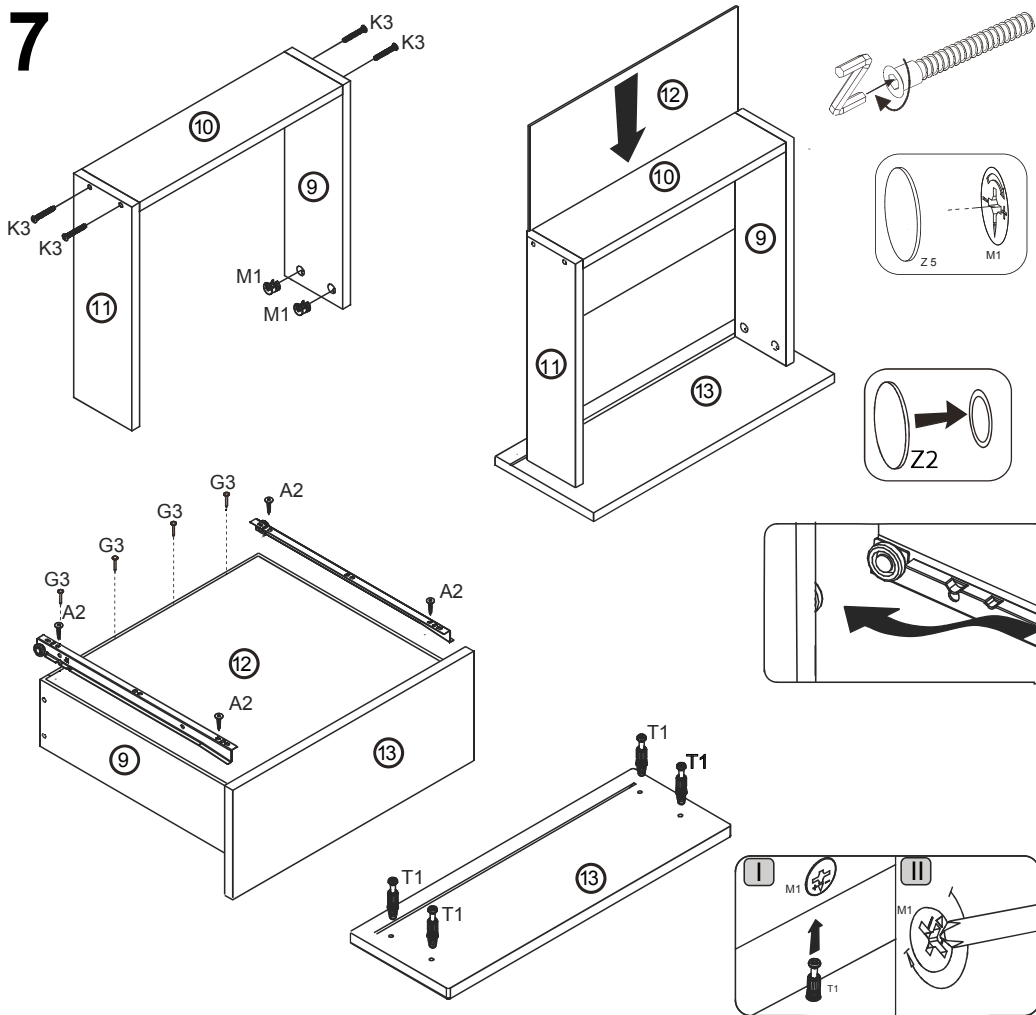


8

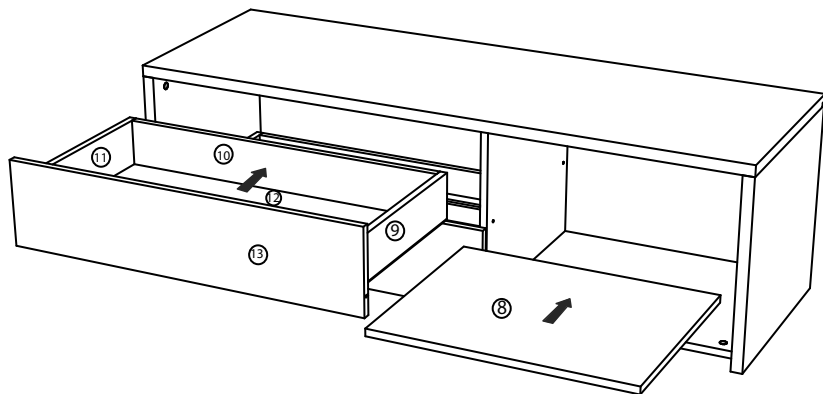


TAHOE TA2



- PL** Instrukcja montażu
- ES** Instrucciones de instalación
- FR** Instructions de montage
- CZ** Montážní návod
- HU** Összeszerelési útmutató
- SK** Montážny návod
- RU** Инструкции по монтажу
- IT** Istruzioni di montaggio
- RO** Instrucțiuni de asamblare
- TR** Montaj talimatı
- NL** Handleiding voor de montage
- UA** Інструкція монтажу

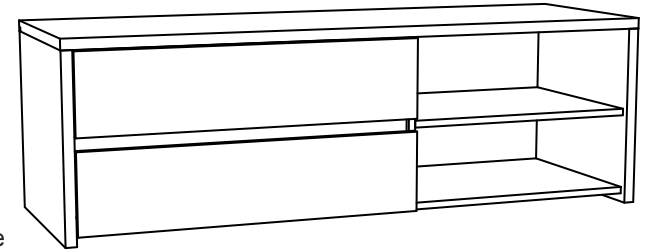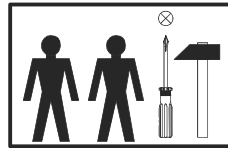

➔ ⬆️ ↗️
1400x450x470

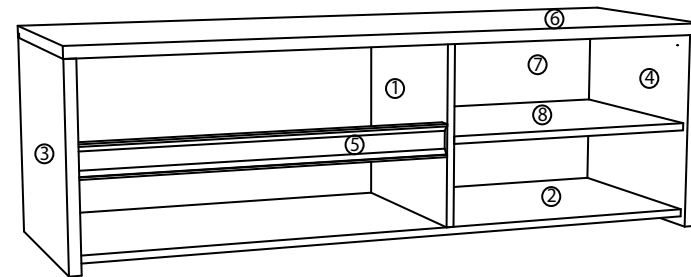


1	389x438	8	551x438
2	1350x438	9	100x400
3	470x425	10	100x726
4	470x425	11	100x400
5	783x68	12	757x407
6	470x1400	13	794x186
7	1364x410		

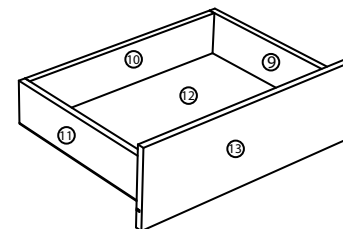


x2

14x 8x30 K1	18x #29,5 T1	18x F15mm M1	10x 1.2x20 G2	10x B5	2x 350mm P2	1x Z1	1x 4x25mm A9
12x 6,4x50 K3	10x 2x20 G3	4x S4	8x 6x13 A1	18x 3x16 A2	8x Z2	12x Z5	1x S3


1

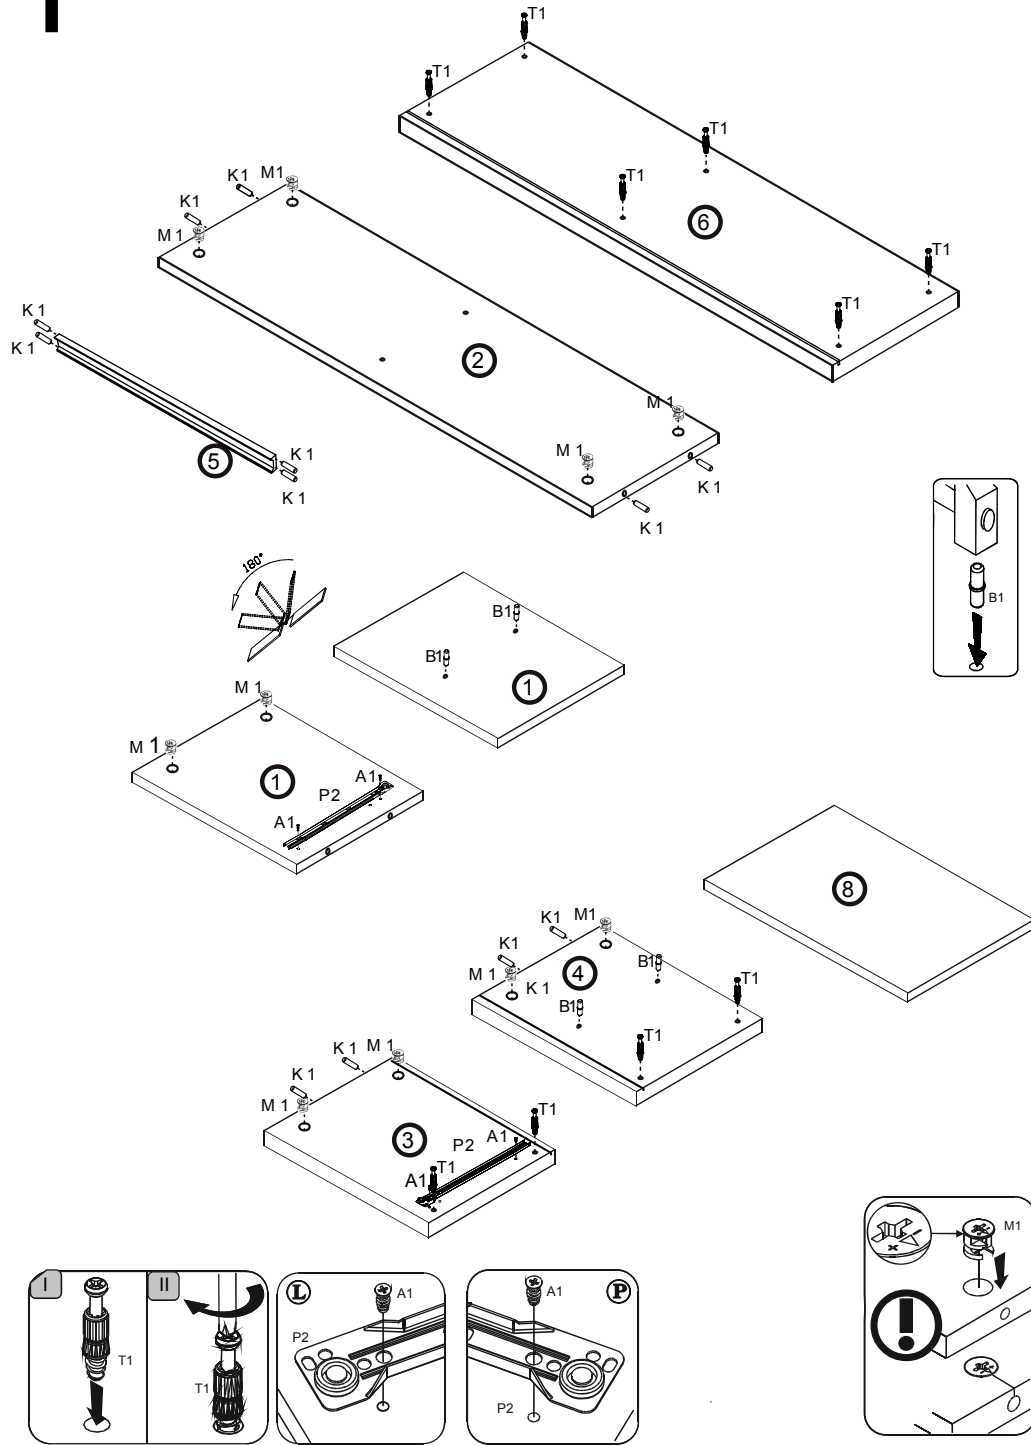

2

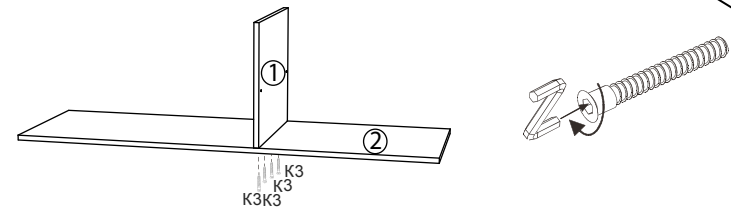



TA2

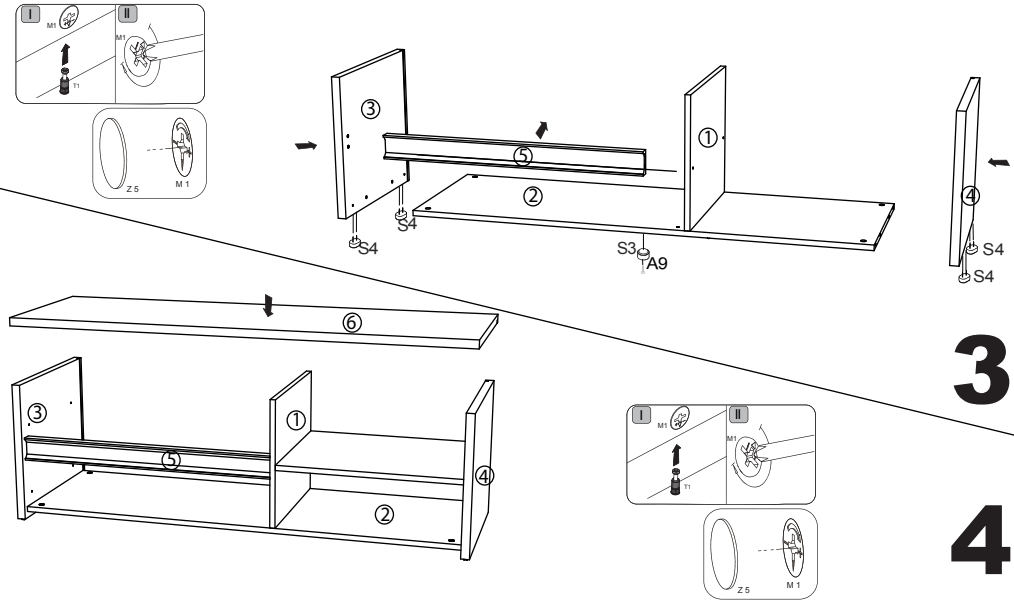

3

4

5

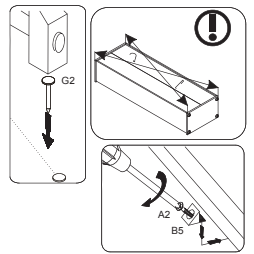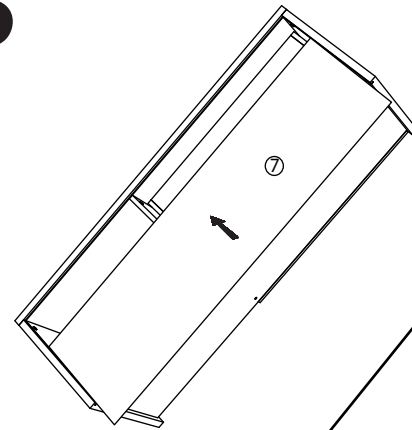

6

