






# TAHOE TA21

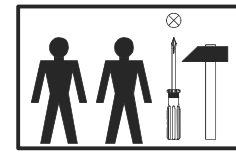

- (PL)** Instrukcja montażu
- (ES)** Instrucciones de instalación
- (FR)** Instructions de montage
- (CZ)** Montážní návod
- (HU)** Összeszerelési útmutató
- (SK)** Montážny návod
- (RU)** Инструкции по монтажу
- (IT)** Istruzioni di montaggio
- (RO)** Instrucțiuni de asamblare
- (TR)** Montaj talimatı
- (NL)** Handleiding voor de montage
- (UA)** Інструкція монтажу



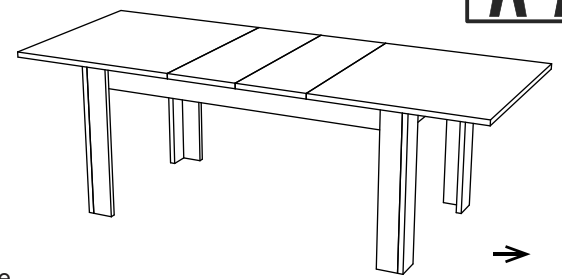


➔    ⬆    ↗  
1620x750x900

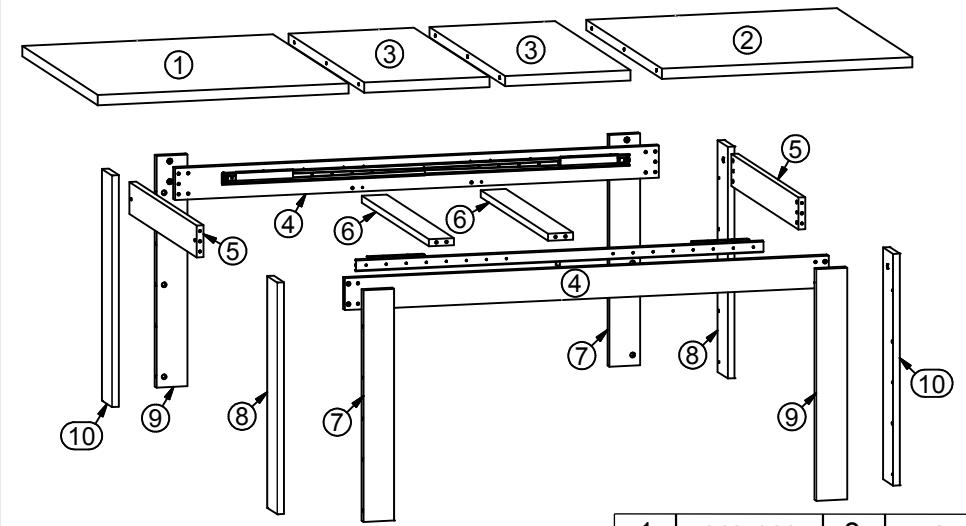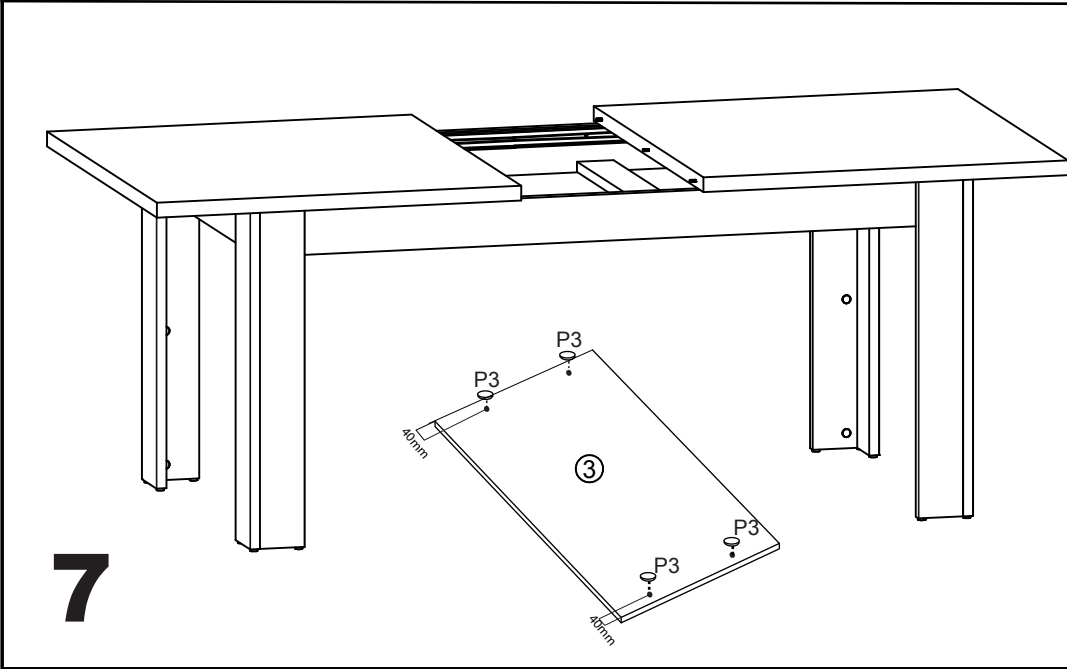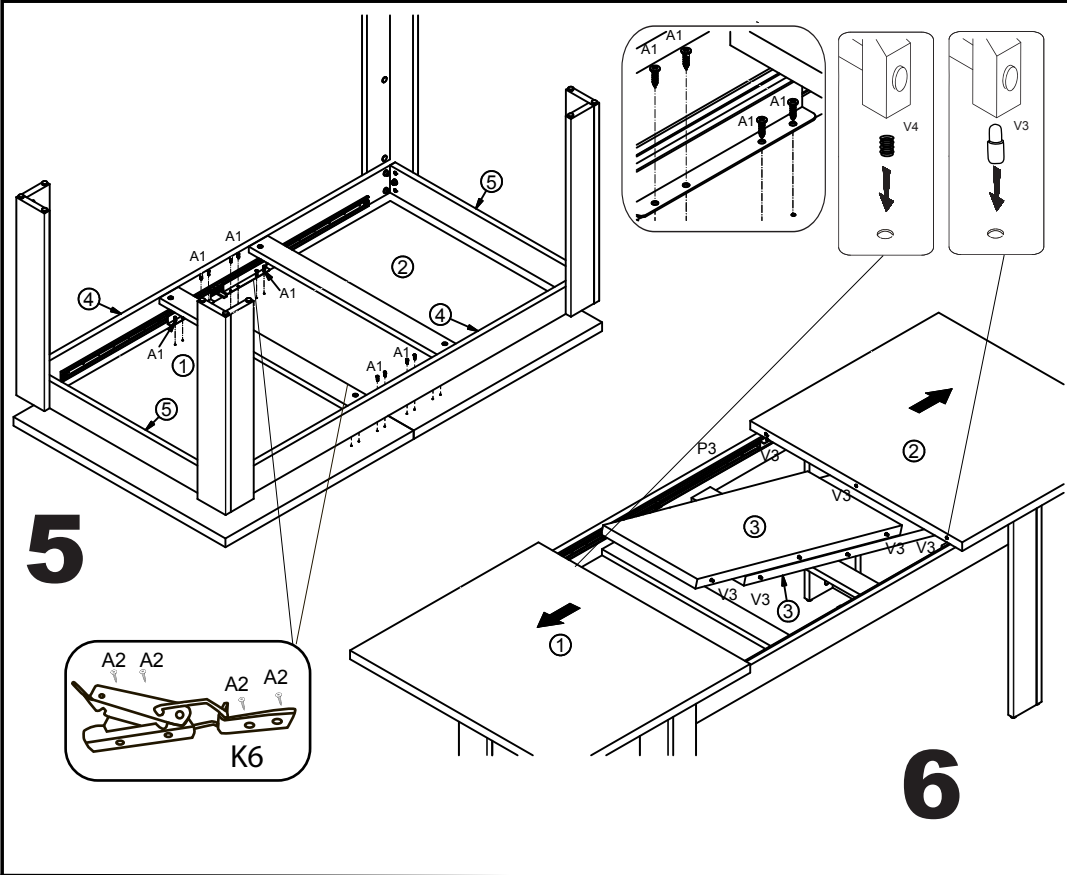


1	810x900	8	725x120
2	810x900	9	725x98
3	340x900	10	725x120
4	100x1544		
5	100x800		
6	80 x 800		
7	725x98		


1x  Z1	9x  V4	12x  V1	2x  K6
16x  8x30 K1	16x  F15mm T1	16x  F15mm M1	1x  P3
8x  6,4x50 K3	9x  V3	12x  S4	38x  6x13 A1
			18x  3x16 A2
			8x  Z1
			16x  Z5
			12x  B3

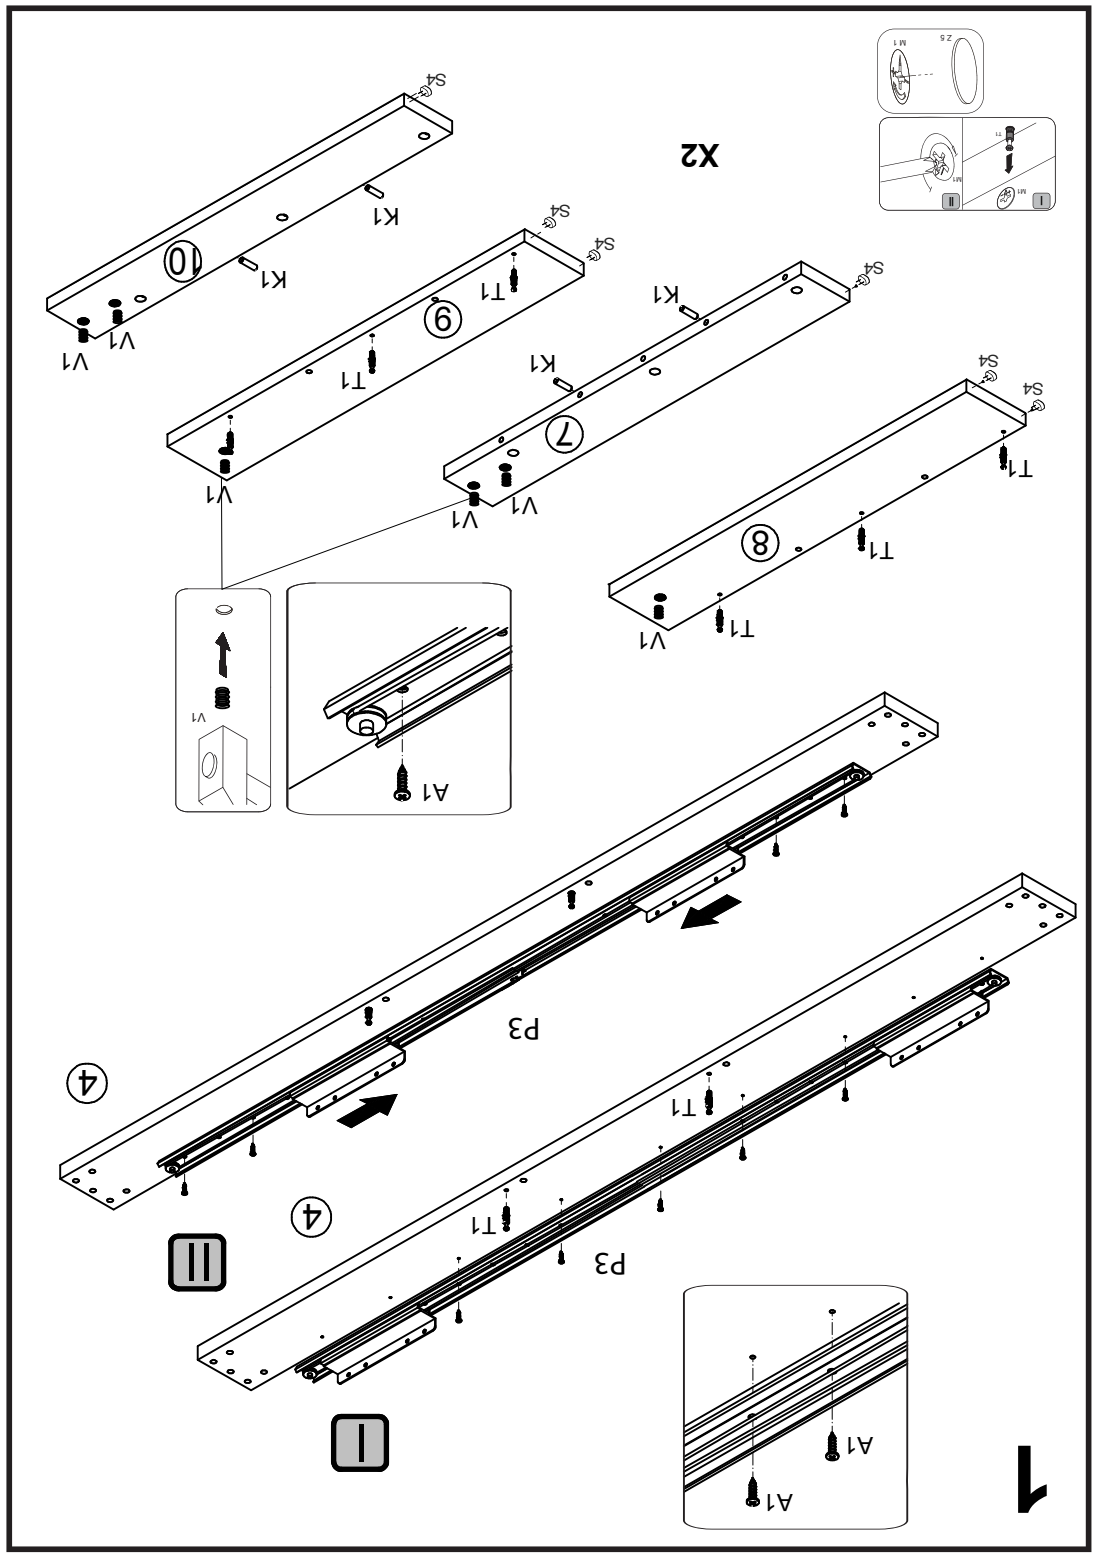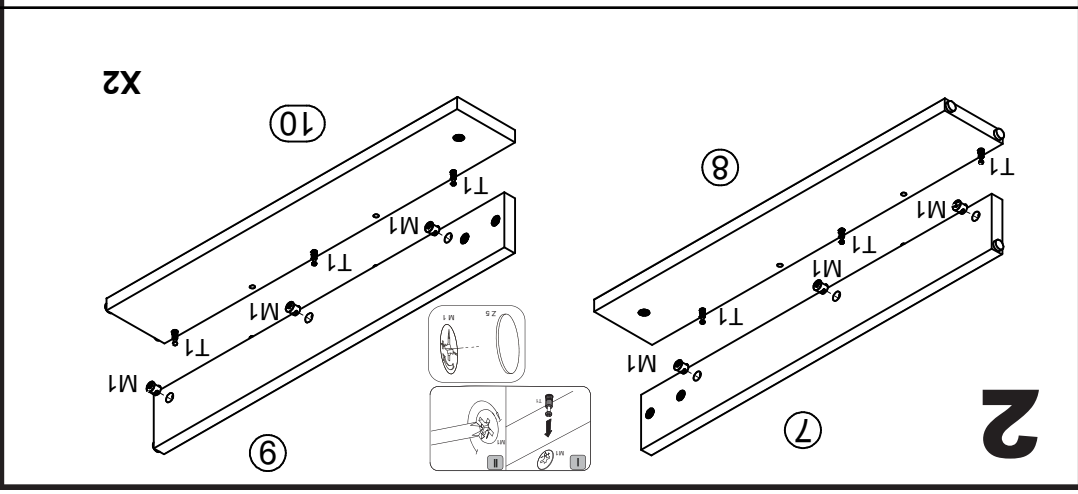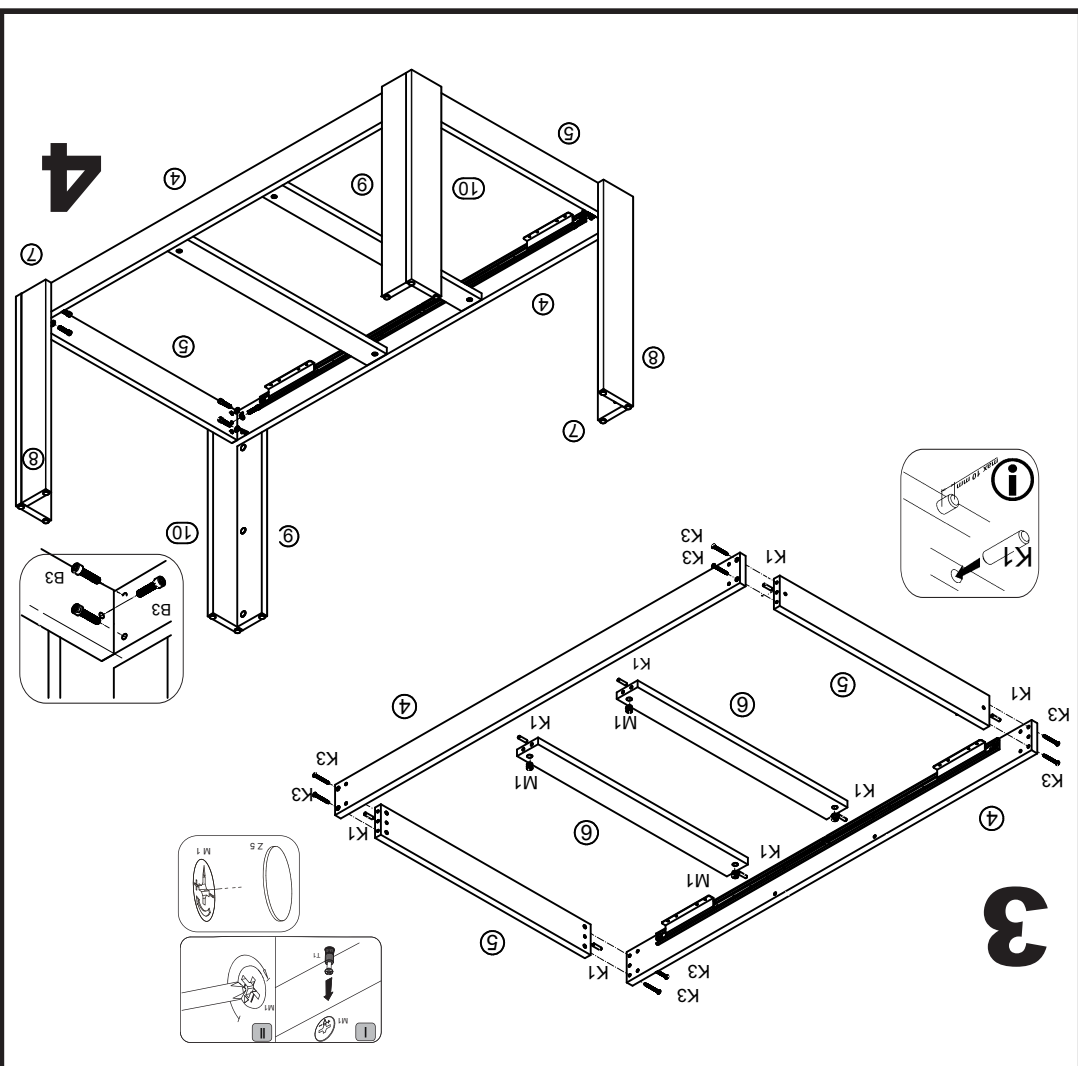

# 1

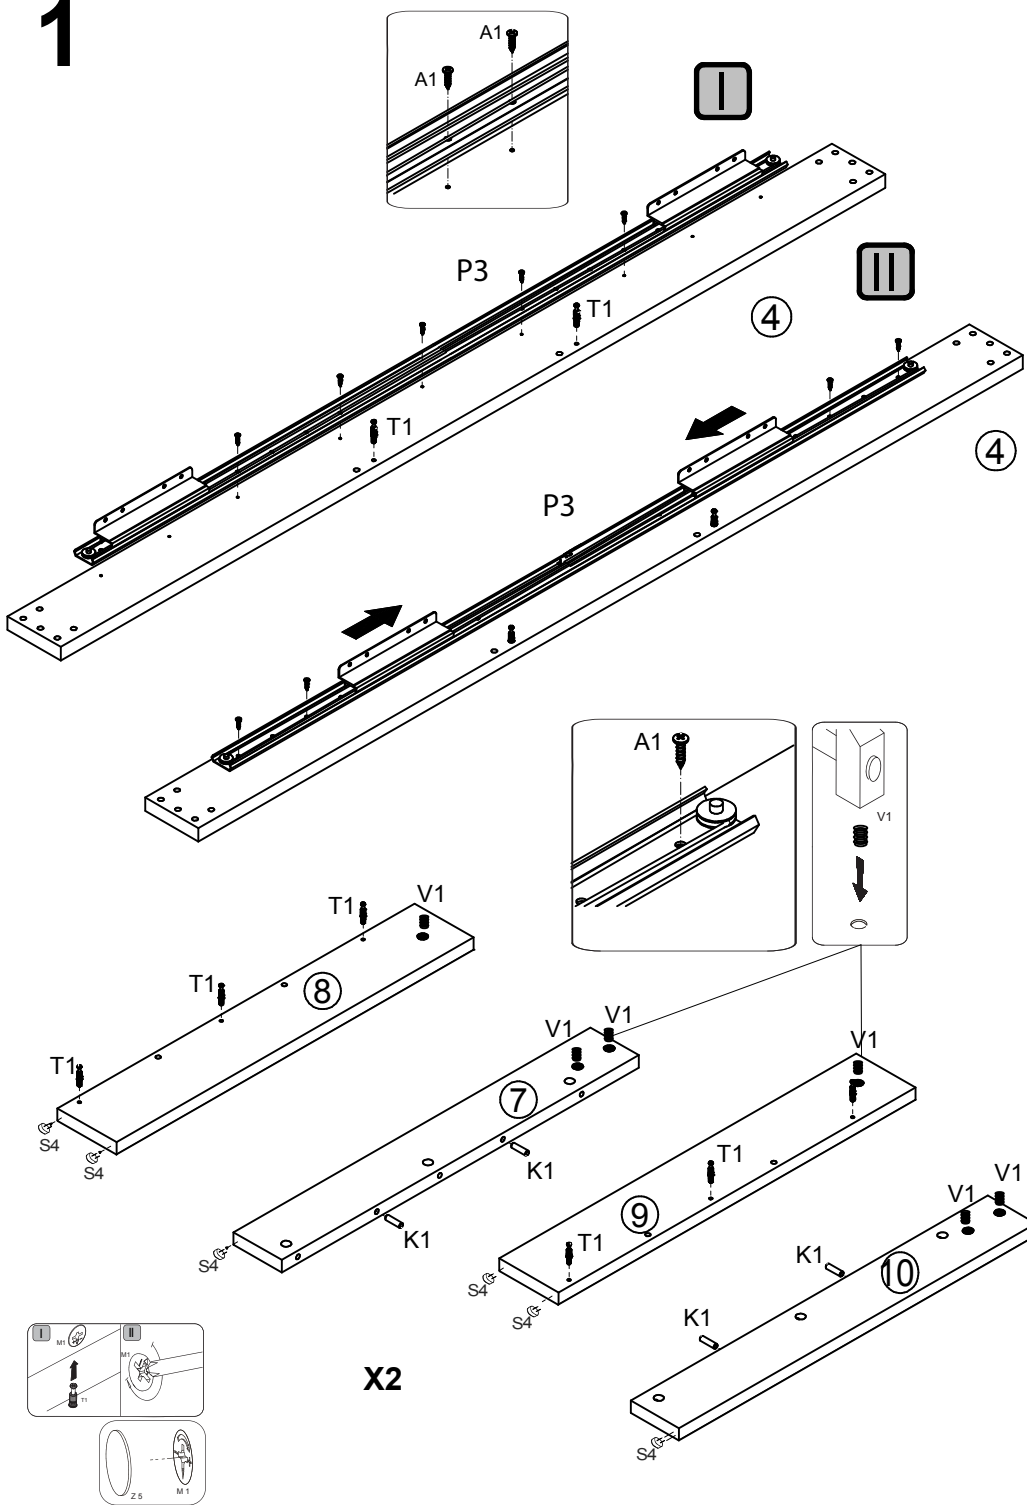


# 2

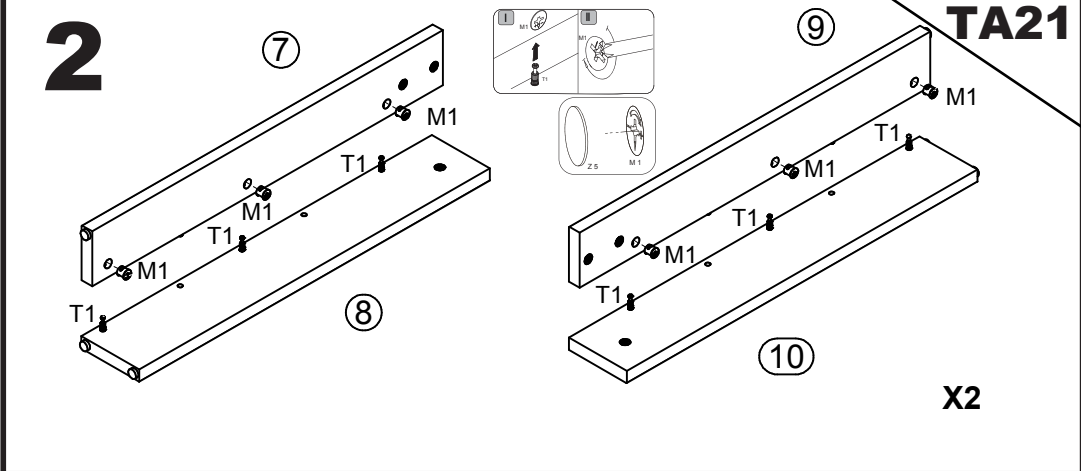

# TA21

# X2

# 3

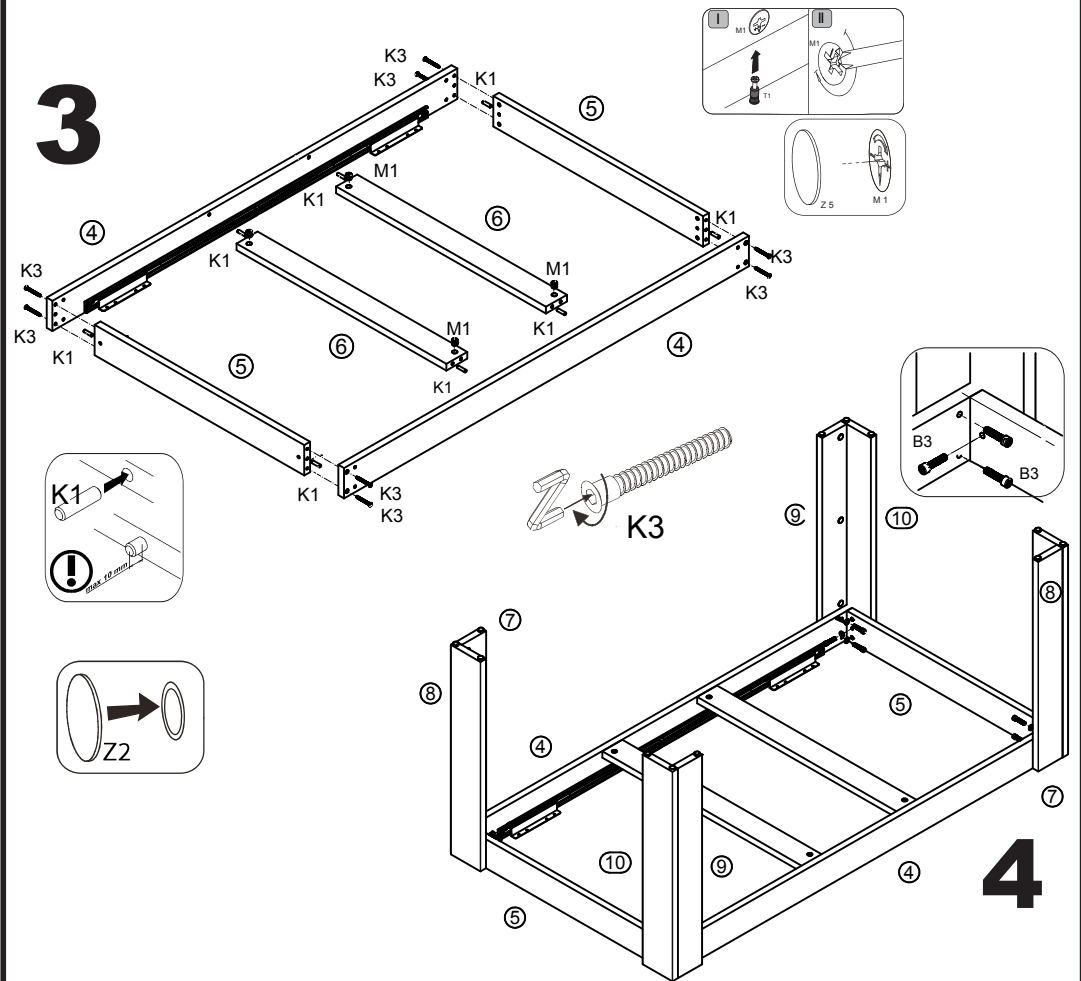

# 4